



FOR U.S. MARKET ONLY INSTRUCTIONS FOR TIMER SWITCH - (NIGHT POSITION)

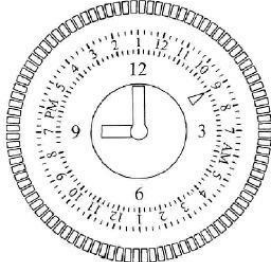

PICTURE 1

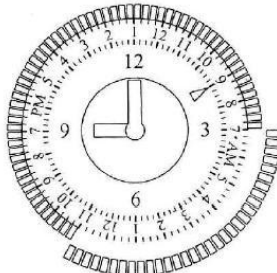

PICTURE 2

FUNCTION OF TIMER

The TIMER switch assembled on the control panel starts the night function (cold drink dispenser).

HOW TO USE TIMER

To use the timer switch follow these instructions:

1. Switch on the machine;
2. See picture 1 for time reference;
3. Set the triangle of the timer on the right local time. Please note AM - PM signs.

N.B. Without the correct time setting, the timer will not work properly.

TIMER PROGRAMMING (Day & Night Function)

See picture n. 2

For example, to have the machine work for slush (Day function) from 7:00 AM to 11:00 PM, push inwards all segments included in those hours, as shown in Picture 2.

During the remaining hours the machine will work as a cold drink dispenser (Night function).

Information provided by Services Unlimited Inc./Granita Guru
email: sales@partsguru.com

Click the link below to view and purchase the Defrost Timer
<http://www.shop.partsguru.com/T-24-7-Defrost-Timer-24-7-T-24-7.htm>